





Use AirPrint to print wirelessly from your iPhone, iPad, or iPod touch

Before you begin

- Make sure that your iOS device and your printer are connected to the same Wi-Fi network and you're within range.

Print with AirPrint

1. Open the app you want to print from.
2. To find the print option, tap app's share icon,  or , or tap . If you can't find the print option, check the app's User Guide or Help section. Not all apps support AirPrint.
3. Tap  or Print.
4. Tap Select Printer and choose an AirPrint-enabled printer.
5. Choose the number of copies or other options, like which pages you want to print.
6. Tap Print in the upper-right corner.

